



Installation manual for VNX driver module




STEP 1. Remove five screws holding the top cover and take off the top lid.

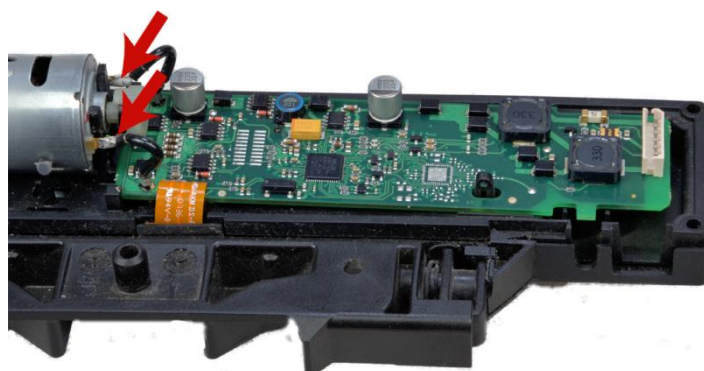

STEP 2. Unsolder the wires from electric motor.

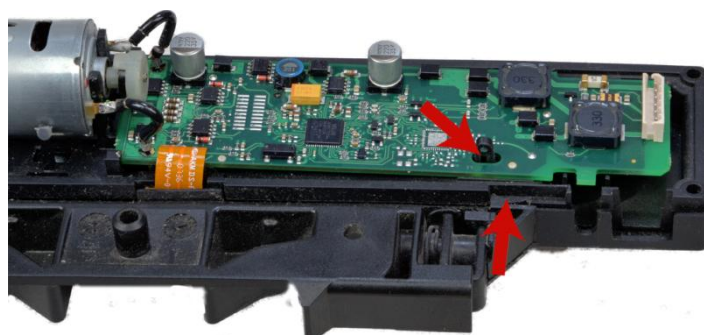

STEP 3. Remove the genuine electronic board while pressing shown plastic snaps.

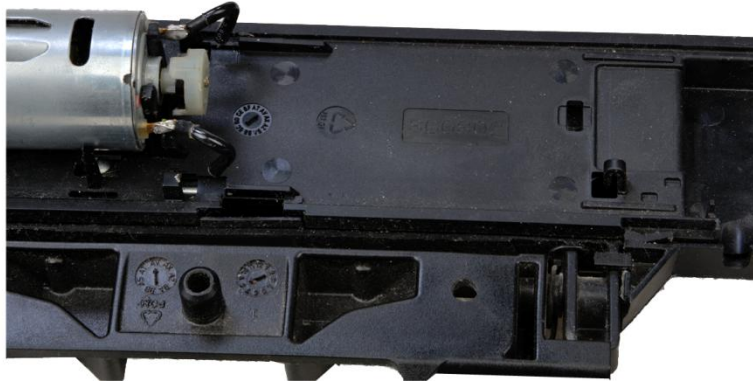

STEP 4. Disassembled module is now ready for installation of VNX controller



STEP 5. Install a VNX controller, and proceed in a reverse order with above shown steps.